

## SOUND

### SOUND SELECT



Sound Select												Virtual Technician				Brilliance (-10~+10)			Spatial Headphone Sound																																
Classic E.Piano   Modern E.Piano   Jazz Organ   Church Organ   Harpsichord   Vibraphone   String Ensemble   Slow Strings   Choir   New Age Pad   Atmosphere												Clean   Strong   Dark   Rich   Classical				Off   -   +			Off   Forward   Normal   Wide																																
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
SK Concert Grand   EX Concert Grand   Upright Piano   Studio Grand   Mellow Grand   Mellow Grand 2   Modern Piano   Dual Mode On   Dual Balance Reset   Dual Balance I   Dual Balance +												Off   Room   Lounge   Small Hall   Concert Hall   Live Hall   Cathedral				Touch*			Normal   Open   Semi Open   Closed   Inner-ear   Canal																																
Sound Select   1 ~ 19												Reverb   REU ↔ ron				Touch   tch ↔ nrn			Phones Type   HPE ↔ nrn																																

\* Cycle through 4 setting types

## METRONOME

### METRO-NOME



Time Signature												Metronome Volume																																							
1/4   2/4   3/4   4/4   5/4   3/8   6/8   -   +												0   1   2   3   4   5   6   7   8   9   0																																							
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
Tempo + (-2) (+2)   Metronome Tempo (3 digits)   120												Grave... 46   Largo... 56   Lento... 66   Adagio... 72   Adagietto... 80   Andante... 88   Andantino... 96   Moderato... 108   Allegretto... 120   Allegro... 132   Vivace... 144   Presto... 160   Vivacissimo... 184   Prestissimo... 208																																							
Tempo 1 + (-2) (+2)												Metronome Tempo (Musical Term)																																							

## CONCERT MAGIC

### CONCERT MAGIC



Song Select																																																			
I'm A Little Teapot 2   Old MacDonald Had A Farm Row, Row, Row, Your Boat 5   Deck The Halls 10   We Wish You A Merry Christmas Joy To The World 12   Auld Lang Syne 19   Londonderry Air 17   Fur Elise 26   William Tell Overture 24   When The Saints Go Marching In 22   Blue Danube Waltz 29   Waltz Of The Flowers 31   Circumstance 34   Pomp And Circumstance 36   Funerill Funclia 38   Santa Lucia 37   When Irish Eyes Are Smiling 35   Wedding March 33   Bridal Chorus 32   Gavotte (Gosse) 30   Saver's Waltz 28   Clair De Lune 27   Andante from Symphony No.94 (Haydn) 25   The Entertainer 23   The Campion Faces 21   On Susanna 20   Clementine 18   Yankee Doodle 16   Battle Hymn Of The Republic 15   Silent Night 13   O Come All Ye Faithful 11   Jingle Bells 9   Hark The Herald Angels Sing 8   Fete Jacques 6   London Bridge 4   Mary Had A Little Lamb 3   Twinkle, Twinkle, Little Star 1																																																			
A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7	D7	E7	F7	G7	A7	B7	C8
Song Select   1 ~ 40																																																			

\* If Vocal Assist is activated, the number of the selected song will be announced.

## SETTINGS

**Settings Overview:**

- Tuning:** Tuning Value (3 digits) = 400 (427 Hz ~ 453 Hz)
- Transpose:** Transpose (-6 ~ +5) = -1
- Transmit MIDI Program Change:** PGM = On
- MIDI Local Control:** LCL = On
- Multi-timbral Mode:** MLT = On 2
- Sound Preview & Vocal Assist Volume:** URV = 1
- MIDI Channel:** MIDI Channel = 2, 4, 7, 9, 11, 14, 16
- Bluetooth:** blu = On
- Auto Power Off:** aut = 15 (15 min, 60 min, 120 min)

**Control Panel Labels:** METRO-NOME, SOUND SELECT, L SETTINGS, REC, PLAY/STOP, DEMO, REC, RECORDER, SPT, Fct, RPS, End.

## LESSON

### Selecting a Lesson book and song

**Lesson Selection:**

- Press **LESSON** + **Book 1** through **Book 5**.
- Press **1** through **0** to select a **Song Number (3 digits)**.
- Example list:
  - Beyer ..... 001 ~ 106
  - Burgmüller .... 601 ~ 625
  - Czerny ..... 201 ~ 230
  - Alfred 1A ..... 801 ~ 841
  - Alfred 1B ..... 801 ~ 838

### Selecting the part to practice

**Part Selection:**

- L:** Press once: Left-hand only
- R:** Press twice: Right-hand only
- L & R:** Press 3 times: Both Left and Right hands

### Listening to the song

**Listening to the song:**

- Press **CONCERT MAGIC** + **LESSON** (1) to enter **DEMO**.
- Press **PLAY/STOP** + **REC** (2) to enter **RECORDER**.
- Press **LESSON** + **SOUND SELECT** (3) to listen to the song.

### STARTUP SETTINGS

**Startup Settings:**

- Press and hold **REC** + **SOUND SELECT** for three seconds.
- Display shows **SPT**.

### FACTORY RESET

**Factory Reset:**

- Hold both **METRO-NOME** and **SOUND SELECT** buttons.
- Turn the power on.

Display shows **Fct** and **RPS**. Press **End**.

## RECORDER

### Record song

**Recording a Song:**

- Enter recording mode (Press **REC**).
- Select a song memory (Press **PLAY/STOP** + **SOUND SELECT** to select Song 1, 2, or 3).
- Start recording (Press **REC**).

### Play song

**Playing a Song:**

- Press **PLAY/STOP** + **SOUND SELECT** to select Song 1, 2, or 3.

### Erase all songs

**Erasing All Songs:**

- Hold both **PLAY/STOP** and **REC** buttons.
- Turn the power on.